

VW Key Head Replacement

1. Make sure key blade is extended. Separate top and bottom casings by placing screw driver between housings on key blade side of key and twisting.



2. Separate top casing by sliding screw driver along key blade channel and twisting apart



3. Carefully remove both battery and remote circuit board and fit them to new Key Head.
4. Assemble new Key Head to your original bottom key housing and blade.

Liability Disclaimer

These instructions are based on carefully documented info and years of research. The author Car Audio New Zealand can not be held accountable for discrepancies due to vehicle options or manufactures variations. Car Audio New Zealand (2006) Ltd can not be held responsible for damage that may occur to the vehicle while using this instruction booklet.