


Coding Instructions Merlin Remote M802

1. Remove front cover from your existing remote.
2. Remove the cover from your new remote.
3. Simply copy the 12 pin combination from your old remote to your new remote.
4. Refit covers

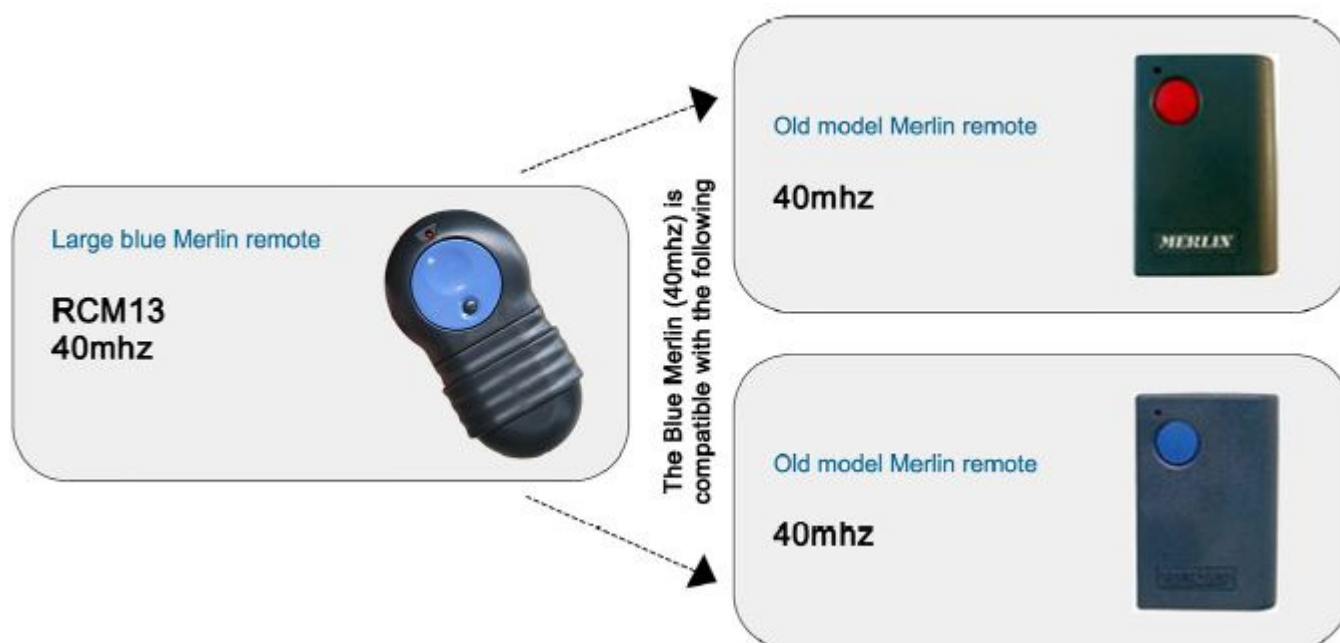

Liability Disclaimer

These instructions are based on carefully documented info and years of research. The author Car Audio New Zealand can not be held accountable for discrepancies due to vehicle options or manufactures variations. Car Audio New Zealand (2006) Ltd can not be held responsible for damage that may occur to the vehicle while using this instruction booklet.